

1,2,3, **VOTE!**

Touch Screen Voting With the ES&S iVotronic

1 ACTIVATE BALLOT

You or a poll worker will activate your electronic ballot by inserting the Personal Electronic Ballot into the appropriate slot. Next, touch the language of choice with your finger.



2 MAKE SELECTIONS

 
To make your selections, touch the box next to the name. To de-select, touch the box again. The iVotronic will not allow you to vote for more people than may be elected to any one office.



Touch "NEXT" or "BACK" boxes in the lower corners of the screen to navigate throughout the ballot.


A. WRITE-IN CANDIDATES

To cast a vote for a write-in candidate, touch the "WRITE-IN" option, and a keyboard will appear on the screen. Type in the name of a candidate and press "ACCEPT." Your selection will appear on the screen.



B. REAL-TIME AUDIT LOG

 To verify selections in writing, watch the voter verifiable paper audit trail, or Real-Time Audit Log, on the left-hand side of the voting booth.



3 REVIEW BALLOT

 
After completing the last ballot page, touch "REVIEW" and carefully review the selection review screen. To change or make a new choice, touch the box next to the candidate's name or issue, and then touch the box of your new selection.



VOTE!

When finished, press the flashing red "VOTE" button to cast your ballot.


The "THANK YOU FOR VOTING" screen means you have properly cast your ballot.

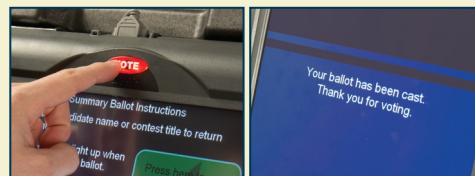

Voting on an iVotronic is as easy as 1, 2, 3

1 Make your selections

 To vote, touch the BOX to the left of each candidate or selection of your choice.

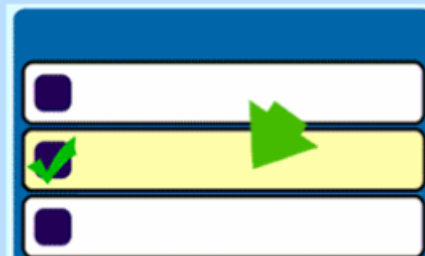

Use the Next and Back buttons at the bottom of the screen to view additional ballot pages.



2 Review your selections

Touch anywhere on a contest or candidate to make changes to that contest.



3 Cast your ballot

Press the Vote button at the top of the voting machine when it begins to flash OR press the "Cast your ballot now" when it appears on screen.



Begin Voting 